
T3HA/T3HS/T4MA/T4LA

ALARM, SUB output type


■ Features

- •Alarm, SUB output type
- •High accuracy measurement : ±0.5
- Various size





Ordering information

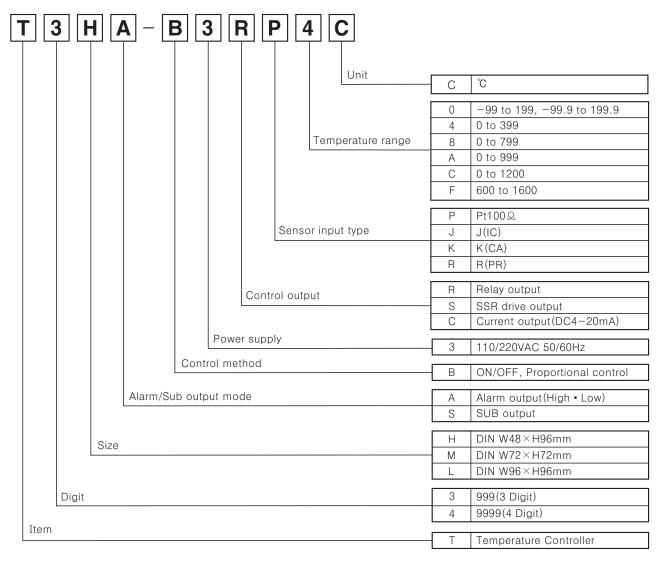

***See H-90 about sensor temperature range for selection.**

H-89 Autonics

Alarm Output Type

■Temperature range for each sensor

Model		ТЗНА					T3HS	T4MA / T4LA							
Sensor input type		Thermocouples			RTD		Thermocouples		RTD	Thermocouples				RTD	
		J(IC)	K(CA)		Pt100Ω		J(IC)	K(CA)	Pt100Ω	J(IC)	K(CA)	R(PR)	Pt100	ο Ω
(°C) Standard scale range	1600 1200 1000 800 600 400 200 100										1200°C		1600℃		
			999°C 799°C												
		399℃	399℃		199℃	399℃	399℃	399℃	399℃	399℃	399°C		600℃	199.9℃	399℃
	0 -100				-99℃									-99.9℃	

₩In case input sensor is R(PR) type, it is not available to perform correct control under 600°C.

Specifications

Model		ТЗНА	T3HS	T4MA	T4LA					
Power supply		110/220VAC 50/60Hz								
Allowable voltage range		90 to 110% of rated voltage								
Power consumption		3VA								
Display method		7 Segment LED display								
Character size		W6×H10mm W7.2×H9.8mm W9.5×H14.5								
Display accuracy		F · S \pm 0.5% rdg \pm 1digit								
Setting type		Digital switch setting								
Setting accuracy		$F \cdot S \pm 0.5\%$								
Sensor input		Thermocouples: K(CA), J(IC), R(PR) / RTD: Pt100Ω								
Input line resistance		Thermocouples : Max. 100Ω, RTD : Max. 5Ω per a wire								
	ON/OFF	Hysteresis : Variable F · S 0.2 to 3%								
Control	Proportional	Proportional band: Variable F · S 1 to 10%, Period: 20sec. fixed								
Alarm	SUB	SUB∶ Variable 0 to −50°C								
output Alarm		(Note) ALARM: Variable F · S 1 to 10%								
RESET adjuster range		F \cdot S $\pm 3\%$ Variable (Only for control deviation)								
Control output		 Relay output: 250VAC 3A 1c SSR drive output: 24VDC ±3V 20mA Max. Current output: DC4-20mA Load 600Ω Max. 								
Sub output		ALARM OUT : 250VAC 1A 1a	SUB OUT: 250VAC 1A 1a	ALARM OUT: 250VAC 1A 1a	ALARM OUT: 250VAC 1A 1c					
Self-diagnosis		Built-in burn out function								
Insulation resistance		Min. 100MΩ (at 500VDC megger)								
Dielectric strength		2000VAC 50/60Hz for 1 minute								
Noise strength		$\pm 1 \mathrm{kV}$ the square wave noise(pulse width : $1 \mu \mathrm{s}$) by the noise simulator								
Vibration	Mechanical	0.75mm amplitude	ections for 1 hour							
Vibration	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each of X, Y, Z directions for 10 minu								
Shock	Mechanical	3	3 times at X, Y, Z direction	n						
	Malfunction	100m/s ² (Approx. 10G) 3 times at X, Y, Z direction								
Relay life cycle	Mechanical	Min. 10,000,000 times								
	Electrical	Min. 100,000 times (250VAC 3A at resistive load)								
Ambient temperature		-10 to 50°C (at non-freezing status)								
Storage temperature		-20 to 60℃ (at non-freezing status)								
Ambient humidity		35 to 85%RH								
Unit weight		Approx. 514g	Approx. 517g	Approx. 425g	Approx. 484g					
<u> </u>										

 $\ensuremath{\mbox{\%}}$ (Note) F.S is same with sensor measuring temperature range.

Ex) In case of using temperature is from $-99.9\ \mathrm{to}\ 199.9\ \mathrm{C},$ Full scale is 299.8.

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area sensor

(D) Proximity sensor

(E) Pressure sensor

(F) Rotary encoder

(G) Connector/ Socket

(H) Temp. controller

(I) SSR/ Power controller

(J) Counter

(K) Timer

Panel meter (M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching power supply

(Q) Stepping motor & Driver & Controller

(R) Graphic/ Logic panel

(S) Field network device


(T) Production stoppage models & replacement

Autonics H-90


T3HA/T3HS/T4MA/T4LA

Connections


●T3HA, T3HS

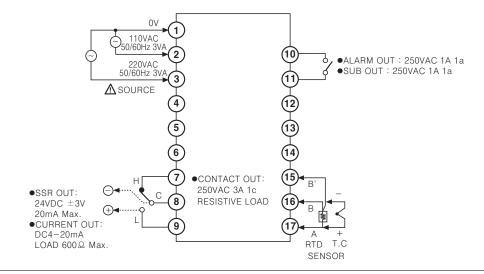

●T4MA

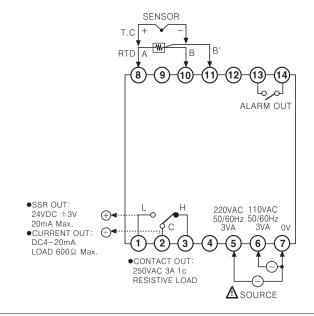

●T4LA

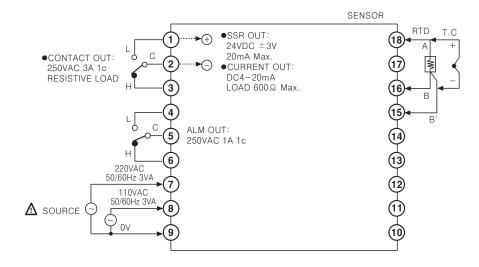


H-91 Autonics


Alarm Output Type

Dimensions


•T3HA, T3HS

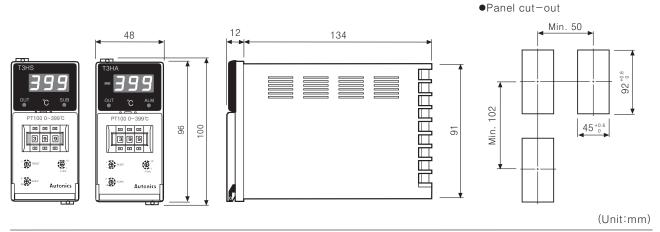



●T4MA

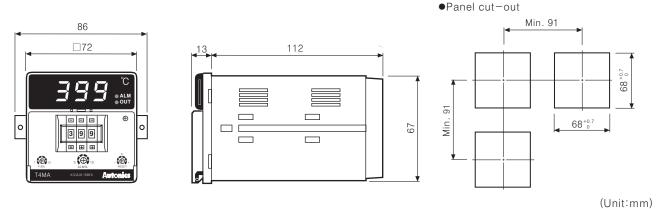

●T4LA

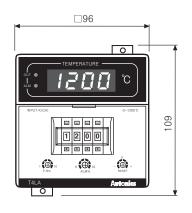

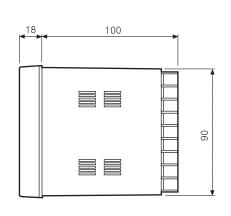

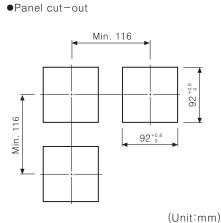

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area

(D) Proximity sensor

(E) Pressure

(F) Rotary encoder

(G) Connector/ Socket

(H) Temp. controller

(I) SSR/ Power controller

(J) Counter

(K) Timer

(L) Panel meter

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(O) Sensor controller

(P) Switching power supply

(Q) Stepping motor & Driver & Controller

(R) Graphic/ Logic panel

(S) Field network device


(T) Production stoppage models & replacement

Autonics H-92

T3HA/T3HS/T4MA/T4LA

■ Proper usage

Using front adjuster

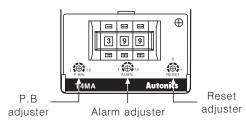


P.B adjuster

In case of ON/OFF control, set variable F.S O. 2 to 3% of hysteresis, and in case of proportional control, set variable F.S 1 to 10% of hysteresis.

•Alarm adjuster

It adjusts alarm range (F.S 1 to 10%) and having 1:1 range for upper and lower limited range by set value.

Ex) In case the full scale of temperature controller is 400°C, if setting alarm range is maximum, the value is $400^{\circ}\text{C} \times 0.1 = 40^{\circ}\text{C}$. And the alarm range is high-limit 40°C and lower-limit 40°C.



(Note)Full scale(F.S) of the alarm is from 0° up to max. temperature.

Reset adjuster

It corrects offset can be occurred by proportional control and has F.S $\pm 3\%$ of adjustable range.



Do not operate the adjuster

- when it is used as ON/OFF control.
- ①Turn left when offset value is higher than set value. (Direction ①)
- 2) Turn right when offset value is lower than set value. (Direction 2)


Case detachment


●T4MA

●T3HA(S)/T4LA







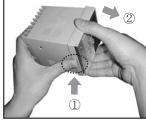

of Lock toward $\ensuremath{\mathbb{ D}}$ and turn it toward $\ensuremath{\mathbb{ D}}$ and pull squeeze and pull toward toward 2, it is detached.

OHow to select ON/OFF or proportional by plug pin

Factory specification is proportional control. When using ON/OFF control, transfer the switch of control method from P to F after detaching the case from its body. When control output is current output, P control is fixed, there is no switch Pin of control method.




ONormal/Reverse operation

Reverse operation executes to output ON when processing value is lower than setting value, and it is used for heating. Normal operation is executed conversely and used for cooling. (This item runs as a reverse operation)

SUB function (T3HS)


SUB output is for alarm used as injectior, etc. If the temperature of controlled material reaches to SUB setting value, the SUB output runs and keeps ON continuously.




- *****SUB function is included only in T3H series.
- **X**SUB range can be set up to 50°C lower than setting

OApplication of temperature controller and load connection


Relay output



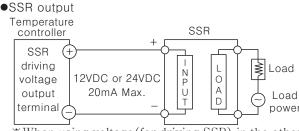

*When using voltage (for driving SSR) in the other purposes, do not over the range of rated current.





**Refer to H-130 for

© Caution for using and
©Simple "Error" diagnosis.